



# HEBVEST

performance • reliability • simplicity



## operator's manual Belgian Waffle Baker - 7"



Model No.	Description	Watts.
BW01HD	Belgian Waffle Baker 7"	1000




# HEBVEST

## Belgian Waffle Baker - 7"

### general **installation:**

1. Install the Waffle Baker in the most convenient location for ease of cleaning, maintenance and general operation. If the appliance is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc. it is recommended that they be made of a non-combustible material. If not, they shall be clad with a suitable non-combustible heat insulating material, and the closest attention be paid to fire pre-vention regulations.
2. Switch power on via "Mains" rocker switch (A). The buzzer will sound three times The LED display will appear with the set baking time.

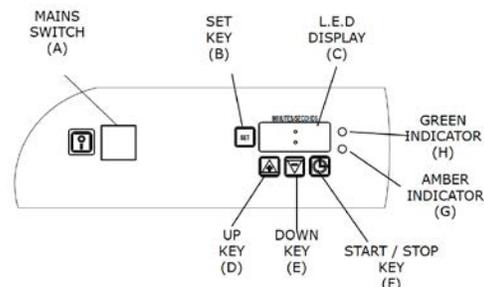

### operating **instructions:**

1. Allow the unit to preheat to the set temperature. An amber light on the front panel will be illuminated while the unit is still preheating.
2. Once the green light illuminates on the front panel, the unit has reached the set temperature, and is ready for baking.
3. Generously apply "SPRAY AND COOK" or similar product onto the plates.
4. Place the desired amount of batter on the bottom plate, close the top lid using the handle provided, and turn the handle clockwise by 180 degrees.
5. To activate the rundown timer, press the "Stop / Start" key (F) once.
6. The rundown timer will now proceed to count down.
7. Once the baking cycle is complete, the buzzer will sound, alerting the user that the product is baked.
8. To reset, press the "Stop / Start" key (F) once.
9. To remove the product, using the handle provided, turn the handle "counter clockwise" by 180 degrees, open the unit and remove the product.
10. Before continuing with the next bake, ensure that the green light is illuminated, indicating that the preheat temperature has been attained.

### programming of **baking temperature:**

1. Press and hold down the "Set" key (B) and then press the "start /stop" key (F). The LED display will show the set baking temperature.
2. To change the temperature, scroll "Up" or "Down" using the keys (D) and (E) on the keypad until the required temperature is reached.
3. Once the desired temperature has been reached, press the "Set" key(B) to store the setting.
4. To check the set temperature repeat step 1

### programming of **baking time:**


1. The timer can be set in minutes and seconds, as indicated on the LED display.
2. To increase the baking time, press and hold down the "Up" key, then press the "Start / Stop" key (F) repeatedly to set the required time.
3. To decrease the baking time, press the "Down" key, then press the "Start/ Stop" key (F) repeatedly to set the required time.
4. Press the "Set" key (B) to store the preset time.



# HEBVEST

## Belgian Waffle Baker - 7"

### exploded view:

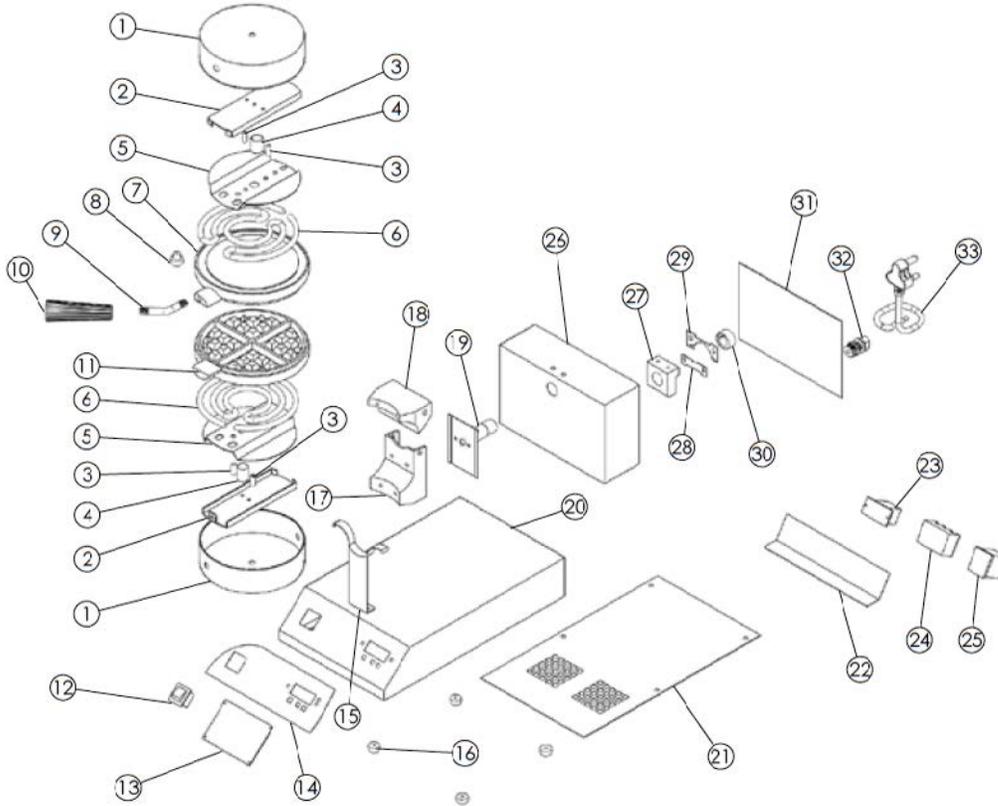


Part No.	Description
1	LID/BASE PRESSING
2	LID CLAMPING PLATE
3	SMALL LID SPACER
4	LARGE LID SPACER
5	ELEMENT CLAMPING PLATE
6	115V 500W ELEMENT
7	TOP WAFFLE BAKER CASTING
8	TEMPERATURE PROBE
9	HANDLE EXTENSION
10	WAFFLE BAKER HANDLE
11	BOTTOM WAFFLE BAKER CASTING
12	NON-ILLUMINATED ROCKER SWITCH
13	CONTROL PC BOARD
14	CONTROL FACIA
15	PIVOT REST
16	RUBBER FOOT
17	BOTTOM PIVOT CASTING
18	TOP PIVOT CASTING
19	PIVOT AXLE
20	OUTER ENCLOSURE
21	BOTTOM COVER PLATE
22	COMPONENT MOUNTING PLATE
23	CONTACTOR
24	CERAMIC CONNECTOR BLOCK
25	TRANSFORMER
26	BACK POST
27	BRASS PIVOT BUSH
28	SMALL PIVOT BRACKET
29	LARGE PIVOT BRACKET
30	PIVOT LOCKING BUSH
31	BACK PLATE
32	CABLE GLAND
33	POWER CORD



## Belgian Waffle Baker - 7"

### wiring diagram:

LEGEND	DESCRIPTION	PART NUMBER
MSI	Main Switch	RS-WBA-1001
RI	12V Relay	1-RELAY-WBA1001
E1/E2	Element 500W 115V	5-500W-WBA1001
P1	Temperature Probe	1-TC-WBA1001
EC1	Electric Control	1-PCB-WBA1001
T1	Transformer	1-TRA-WBA-1001

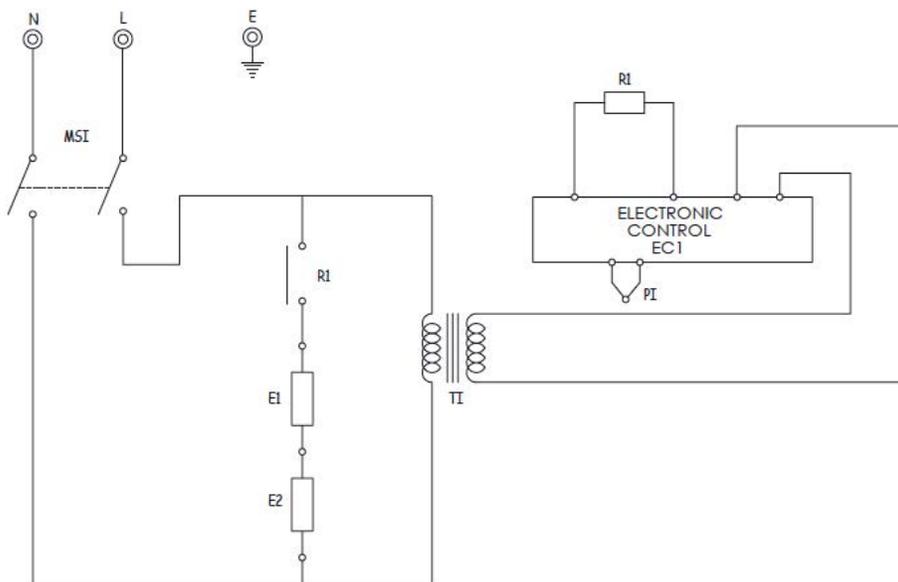

### cleaning guide:

1. Always ensure that the appliance is disconnected from the main power supply before cleaning.
2. This appliance should not be cleaned with a water jet or immersed in water. Use only a damp cloth or sponge dipped in soapy water. Failure to observe this instruction will invalidate the warranty.
3. Wipe off the appliance with a dry cloth and wait at least half an hour before re-connecting to the main power outlet.
4. The plates are Teflon coated and should only be cleaned with a damp cloth. Under no circumstances should the plates be cleaned with abrasive wool as this will invalidate the warranty.